

Installation Instructions

Please Read Before Installing

Overview

RadioRA Color Change Kits allow for changing the color of an existing RadioRA control.

Important Notes

Models Supported: The RadioRA Color Change Kits may be used **ONLY** with the following RadioRA model numbers:

Control Model	Kit Model
RA-6D, RA-6ND, RA-10D	RK-D-
RA-8ANS	RK-S-
RA-AD	RK-AD-
RA-AS	RK-AS-

 
Environment: Ambient operating temperature: 0-40 °C, 32-104 °F, 0-90% humidity, non-condensing. Indoor use only.

Wallplates: Do not paint controls or wallplates.

Cleaning: To clean, wipe with a clean damp cloth. **DO NOT** use any chemical cleaning solutions.


Installation

1. Turn power off at circuit breaker or remove fuse.




Danger - Locate and lock supply breaker in the OFF position before proceeding.

2. Remove Wallplate and Adapter.

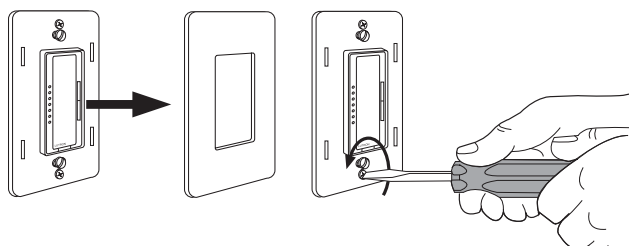


RadioRA® Color Change Kit

RK-D-, RK-AD-, RK-S-, RK-AS-

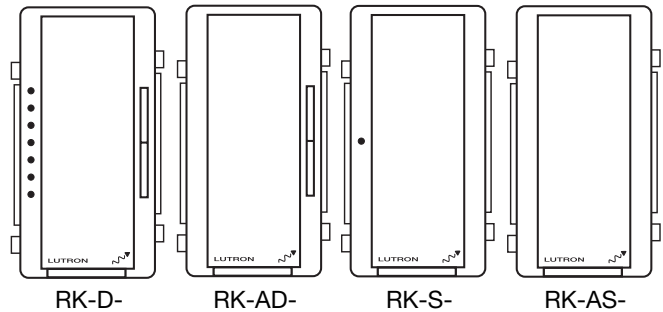


3. Remove existing Color Change Kit. Unclip the existing kit by pressing in on both top clips with thumb and forefinger. Repeat for bottom clips. Pull the kit straight out from the control, being careful not to dislodge the clear plastic button rocker underneath.

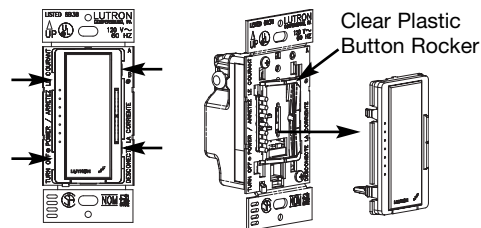


Note: If the clear plastic button rocker gets dislodged or lost, a spare button rocker is provided with the kit. Follow the instructions under **Replacing the Button Rocker** (page 2), then continue to Step 4.


4. Install new Color Change Kit. Push the kit straight onto the control, being careful not to dislodge the clear plastic button rocker underneath. Press firmly on each clip to lock into place.

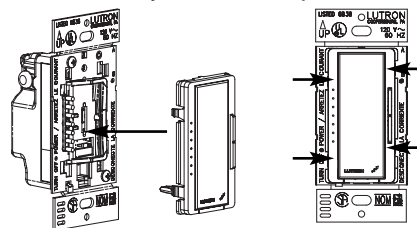


5. Install new Adapter and Wallplate.

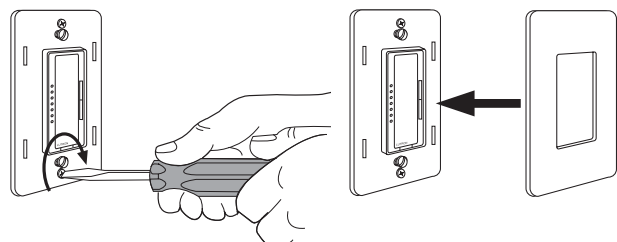

 6. Turn power on at circuit breaker or replace fuse.




7. Check control operation. If any of the buttons on the control feel stiff or do not operate, repeat steps 1-3 and check the clear plastic button rocker. If it is not installed properly, follow the instructions under **Replacing the Button Rocker** to install it properly.

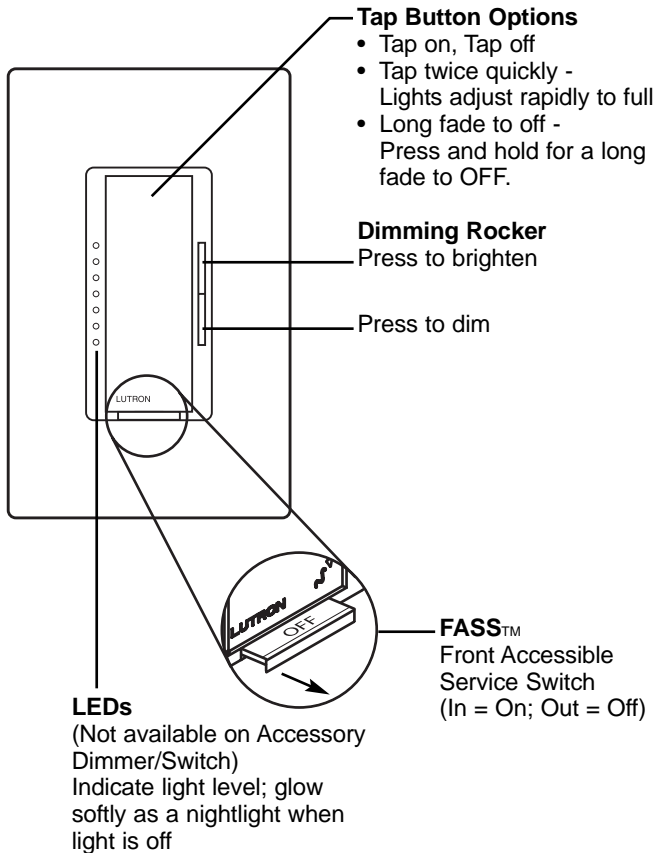


Replacing the Button Rocker

If the clear plastic button rocker gets dislodged or lost, use the included spare to replace it. Follow the instructions below:

1. Holding the rocker as shown, hook the rocker into the hole between the LED pipes and the green antenna.

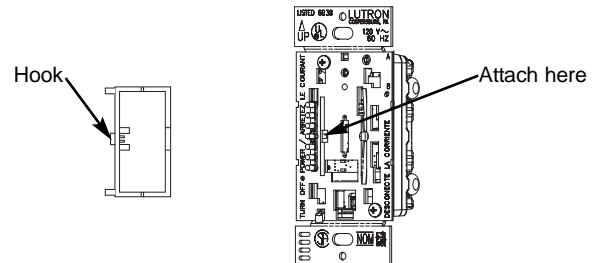

2. Press firmly on the rocker at the hook. When properly seated, the button rocker will snap into place.

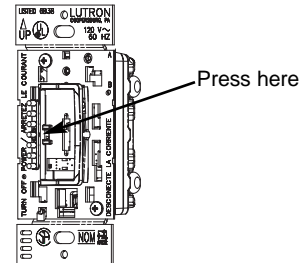

3. Continue with steps 4-7 to complete installing the new Color Change Kit.

Technical and Sales Assistance

If you need assistance, call the toll-free **Lutron Technical Support Center**. Please provide exact model number when calling.
 +1.800.523.9466 (U.S.A., Canada and the Caribbean)
 Other countries call:
 Tel: +1.610.282.3800
 Fax: +1.610.282.3090
 Visit our Web site at www.lutron.com

LIMITED WARRANTY

(Valid only in the U.S., Canada, Puerto Rico, and the Caribbean)

Lutron will, at its option, repair or replace any unit that is defective in materials or manufacture within one year after purchase. For warranty service, return unit to place of purchase or mail to Lutron at 7200 Suter Rd., Coopersburg, PA 18036-1299, postage pre-paid. Telephone the Lutron Technical Support Center toll free at 800-523-9466. For more information regarding this warranty contact your Lutron representative.

THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES, AND THE IMPLIED WARRANTY OF MERCHANTABILITY IS LIMITED TO TWO YEARS FROM PURCHASE. THIS WARRANTY DOES NOT COVER THE COST OF INSTALLATION, REMOVAL OR REINSTALLATION, OR DAMAGE RESULTING FROM MISUSE, ABUSE, OR IMPROPER OR INCORRECT REPAIR, OR DAMAGE FROM IMPROPER WIRING OR INSTALLATION. THIS WARRANTY DOES NOT COVER INCIDENTAL OR CONSEQUENTIAL DAMAGES. LUTRON'S LIABILITY ON ANY CLAIM FOR DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE MANUFACTURE, SALE, INSTALLATION, DELIVERY, OR USE OF THE UNIT SHALL NEVER EXCEED THE PURCHASE PRICE OF THE UNIT.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

These products may be covered under one or more of the following U.S. patents: 4,835,343; D353,798 and corresponding foreign patents.

Lutron, RadioRA and the sunburst logo are registered trademarks of Lutron Electronics Co., Inc.

© 2005 Lutron Electronics Co., Inc.

